

To open the Infinity Zero Gravity Chair



- 1** Stand the chair upright on legs, with pillow facing forward
- 2** Gently push the chair's armrests toward the ground, until both the front and back legs of the chair are firmly touching the ground

01

To recline the Infinity Zero Gravity Chair



- 1** Sit in the chair with your back resting fully against the back of the chair
- 2** Put both of your hands on the armrests
- 3** Put both of your feet on the footrest bar
- 4** Lean back and push the footrest bar forwards and upwards at the same time until the chair reclines into your desirable position

02

To lock the Infinity Zero Gravity Chair



- 1** Recline to the desirable position, find the locking mechanism on the underside of the armrest (towards the middle)
- 2** Flip the locks upward until they are securely locked in place
- 3** Shift weight slightly to ensure the chair has been locked

03

To unlock the Infinity Zero Gravity Chair



- 1** To unlock, disengage both locks by pressing down towards the ground.
- 2** Once locks have been released, press downwards with your feet on the footrest to return to an upright position.

04

To prolong the life of your Caravan Infinity Zero Gravity Chair, store folded out of the sun and elements!